

Care Instructions

Reflexite® GP800 Check

For garments application – High Visibility Workwear
Bulletin #CARE-12




GENERAL INFORMATION

Reflexite® GP800 Check blue, green or red tape exceeds all the requirements of specification EN471: 2003 separate performance level 2 and is certified for 75 wash cycles at 60°C per ISO 6330 method 2A. These Instructions must be followed in order to maintain EN471 compliance. Variations in the care process will change the product performance. It is the enduser's responsibility to ensure that the Care Instructions are observed.

Reflexite® GP800 Check blue, green or red cleans as well at lower temperatures as it does at higher temperatures. To permit environmentally friendly washing, reduce cost, and extend the life of the garment, select the lowest washing temperature that will ensure adequate cleaning of the fabric.

It may be necessary to modify the care label of garments with Reflexite® GP800 Check tape applied to ensure that the performance of the reflective tape is not compromised through improper care

RECOMMENDED CARE SYMBOLS

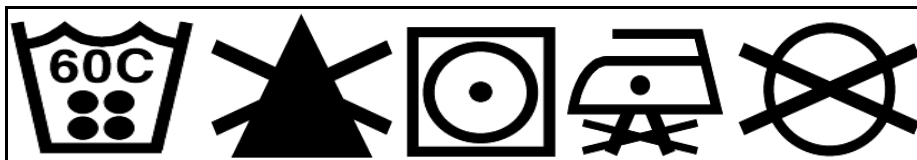

HAND WASHING

Hand washing can be done with a sponge, a soft fabric cloth or a soft brush with lukewarm water and a mild detergent. After washing the tape must be rinsed with clean water.

Stubborn stains such as grease or tar may be spot cleaned with petrol, alcohol, naphtha or turpentine. After spot cleaning the tape must be hand washed as above and rinsed with water.

HOUSEHOLD WASHING

Washer	Standard household washing machine
Temperature	30 ⁰ to 60 ⁰ C
Detergent	Household detergent - Use detergents with moderate pH levels. Avoid using detergents with high pH levels.
Setting	"Colored clothing without pre-wash"

BLEACHING

Do not use Bleach!

DRYING

Household tumble dryer set to 50±5°C for 20-30 min, including 5 min cooling period at end of drying cycle. Dry to "slightly humid". DO NOT OVER DRY!

Note: Length of drying time may increase due to larger loads.

Care Instructions

Reflexite® GP800 Check

For garments application – High Visibility Workwear
Bulletin #CARE-12



IRONING

Do not use steam.
Use a cool or warm temperature setting.
Avoid direct contact of the tape when ironing, use a press cloth.

CHEMICAL CLEANING / DRY CLEANING

Dry cleaning is not recommended.

IMPORTANT NOTICE

All Reflexite products are subject to careful quality control throughout the manufacturing process and are warranted to be of merchantable quality and free from manufacturing defects.
Published information concerning Reflexite products is based upon research which the Company believes to be reliable although such information does not constitute a warranty.
Because of the variety of uses of Reflexite products and the continuing development of new applications, the purchaser should carefully consider the suitability and performance of the product for each intended use, and the purchaser shall assume all risks regarding such use.
All specifications are subject to change without prior notice.

Reflexite European Conversion Center

Cork Road
Unit 4, Industrial Estate
Waterford
Ireland
Tel. +353 51358132 / Fax: +353 51358258
www.reflexite-europe.com

Reflexite ® is a registered trademark of Reflexite Corporation, Avon CT, USA

Technical Publication EU-CARE-12, Pub.2 Feb 2006
© 2006, Reflexite Europe